

Collection Pandora

Maintenance advice

TYPE OF WOOD Recycled teak

ORIGIN Asia

COLOR (OPTIONS) Recycled teak
OTHER MATERIALS Old teak / MDF / Metal
FINISHING Old teak / Topcoat

GENERAL TIPS AND ADVICE

Wood shrinks and expands due to external influences like humidity and temperature. A humidity of 55% to 65% and a constant room temperature of 20°C are the ideal conditions. Large differences in humidity and temperature can cause the wood to crack. If you have a room and/or rooms with varying levels of humidity, we advice to use a humidifier to help stablize the general level of humidity throughout the whole year. It is important not to place your furniture directly next to a heating source or airconditioning. In addition to this, avoid placing furniture in (direct) sunlight. Colors will fade sooner and lacquer and/or varnishes will wear off sooner which increases the likelihood of damages by normal daily use. Always use coasters and if you spill something, make sure to wipe this off as soon as possible. Also don't place any hot items on the furniture.

PERIODIC MAINTENANCE / CLEANING ADVICE

Daily maintenance: Clean with a slightly damp cloth and dry the surface with a dry towel. Avoid aggressive and ammonia containing substances at all times when cleaning. Just dust the metal parts. Only if necessary you can use a slightly damp cloth to clean these parts and immediately dry it afterwards with a dry towel. Periodic maintenance: Clean 1 or 2 times per year the top of your dining table and/or door- and/or drawerfronts with Woodclean and treat the teak wood with Mat Polish to protect it (both products are from Oranje B.V.).